



655 Eisenhower Drive  
 Owatonna, MN 55060 USA  
 Phone: (507) 455-7000  
 Tech. Serv.: (800) 533-6127  
 Fax: (800) 955-8329  
 Order Entry: (800) 533-6127  
 Fax: (800) 283-8665  
 International Sales: (507) 455-7223  
 Fax: (507) 455-7063  
 Website: www.otctools.com

Form No. 528211

**Assembly & Operating Instructions  
 for:**

**2015A**

**Underhoist Stand**

Max. Capacity: 3/4 Ton

The underhoist stand is designed to help support vehicle components during removal or installation.


**Safety Precautions**



**Caution: To prevent equipment failure or damage resulting in personal injury:**



- Read, understand, and follow these instructions. If the operator cannot read these instructions, operating instructions and safety precautions must be read and discussed in the operator's native language.

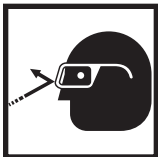

- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.

- Inspect the condition of the underhoist stand before each use; do not use a stand if it's damaged, altered, or in poor condition.

- Use the stand on a hard, level surface. A stand must have solid contact with the ground. Test the stability of the load.


- Do not attempt to support a vehicle with this stand. It is designed to help support vehicle components only.

- Place the load on the center of the saddle, not on the outer lips.

- Do not exceed the rated capacity of the underhoist stand.



**Assembly and Operating Instructions**

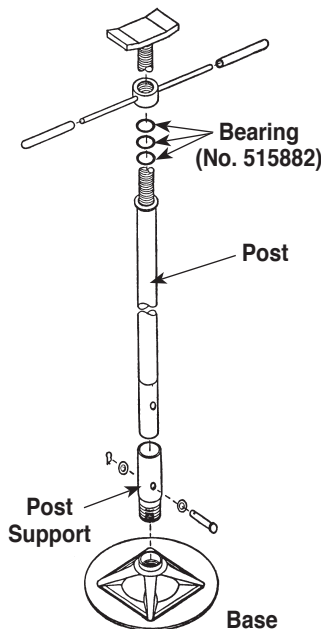

1. Attach post support to base.

2. Insert post into post support, aligning holes. Secure with clevis pin, (2) washers, and cotter pin.

**Raise the Load**

Turn adjusting handle clockwise until saddle meets load. Continue turning handle to raise load to required height.

**Lower the Load**

Turn adjusting handle counterclockwise.

© Bosch Automotive Service Solutions Inc.

Sheet No. 1 of 1

Issue Date: Rev. B July 8, 2016