




655 Eisenhower Drive
 Owatonna, MN 55060 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7223
 Fax: (507) 455-7063

Operating Instructions
 for:

5190

U-Joint Puller

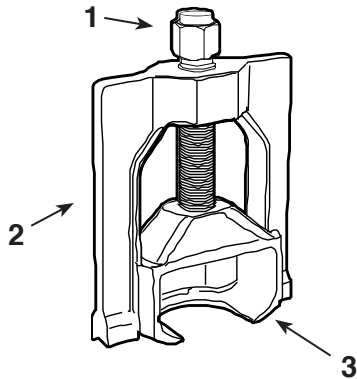

Parts List

Item	Part No.	Qty.	Description
1	5190-3	1	Forcing Screw Kit (forcing screw, washer, bolt)
2	5190-1	1	Puller Frame
3	5190-2	1	Puller Cup
	5190-4	1	Dust Cover (not shown)


Operating Instructions



Warning: To prevent personal injury when using this tool, wear eye protection that meets ANSI Z87.1 and OSHA standards.

1. Remove all bolts from the bearing cups.
2. Slip No. 5190 U-joint puller over the driveshaft yoke as shown.
3. Use a 1-1/4" wrench or socket to turn the forcing screw clockwise.
4. When the bearing cup is loose, repeat the procedure on each bearing cup.

CAUTION: To prevent damage to the U-joint puller, keep forcing screw threads cleaned and lubricated.

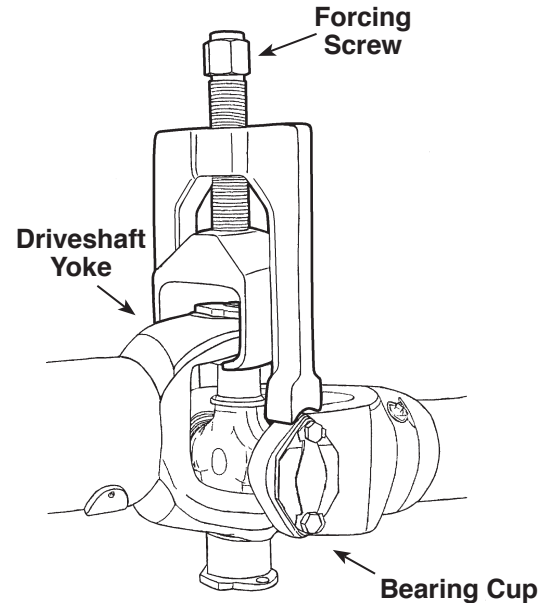

Tech Tip

On some older drive lines, the U-joint cross may bottom out on the yoke before the bearing cup is completely removed. In that case, pull back the U-joint cross far enough to allow the needle bearings to move into the path of the trunnion. Then apply the puller again. The U-joint cross will compress the needle bearings, and it should be possible to remove the bearing cup.