




655 EISENHOWER DRIVE
 OWATONNA, MN 55060 USA
 PHONE: (507) 455-7000
 TECH. SERV.: (800) 533-6127
 FAX: (800) 955-8329
 ORDER ENTRY: (800) 533-6127
 FAX: (800) 283-8665
 INTERNATIONAL SALES: (507) 455-7223
 FAX: (507) 455-7063

Form No. 538622

**Parts List &
 Operating Instructions
 for:**

6733

Honda / Toyota Ball Joint Kit

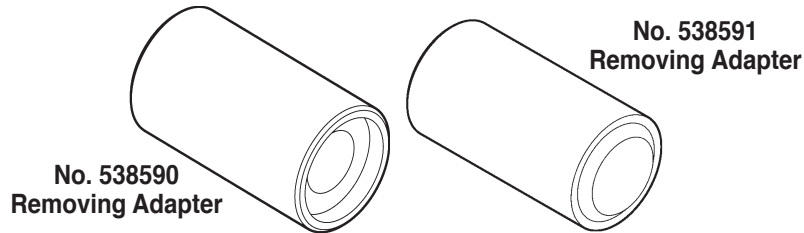

Safety Precautions



Caution: To prevent personal injury,



- Wear eye protection that meets ANSI Z87.1 and OSHA standards.



- Before repairing a vehicle, block the wheels to prevent the vehicle from moving.

- Check the final alignment of the ball joint press and tooling with the components before exerting pressure to remove or replace a ball joint.

Operating Instructions

Application : 2002-'06 Honda CRV Lower Ball Joint

Removal

Note: No. 538590 Honda adapter must be used with OTC No. 6530 Ball Joint Super Set.

1. Replace the forcing screw in the C-frame with the No. 314392 live center forcing screw (included in the No. 6530 set).
2. Remove the ball joint dust boot.
3. Assemble the ball joint press over the control arm as shown in Figure 1.
4. Turn the forcing screw until the removing adapter meets the control arm. Check the alignment of all tooling and components. Tighten the forcing screw until the ball joint is removed.

Installation

1. Clean the control arm and coat the I.D. with a suitable lubricant.
2. Insert the replacement ball joint as straight as possible into the vehicle control arm.
3. Assemble the ball joint press components as shown in Figure 2. Check the alignment of all tooling and components. Tighten the forcing screw until the ball joint is firmly seated.

Figure 1—Removal


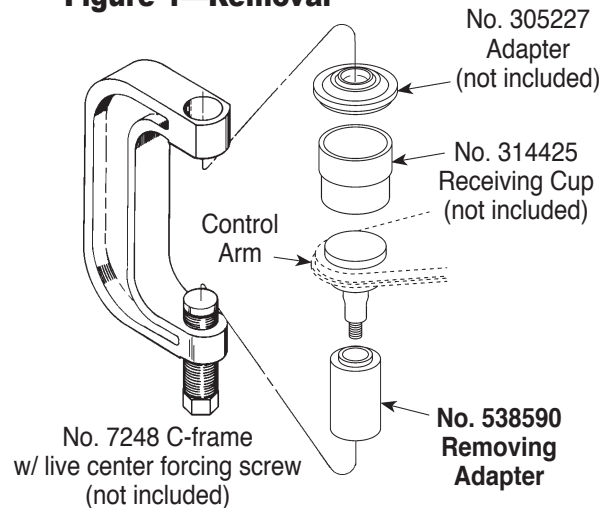


Figure 2—Installation

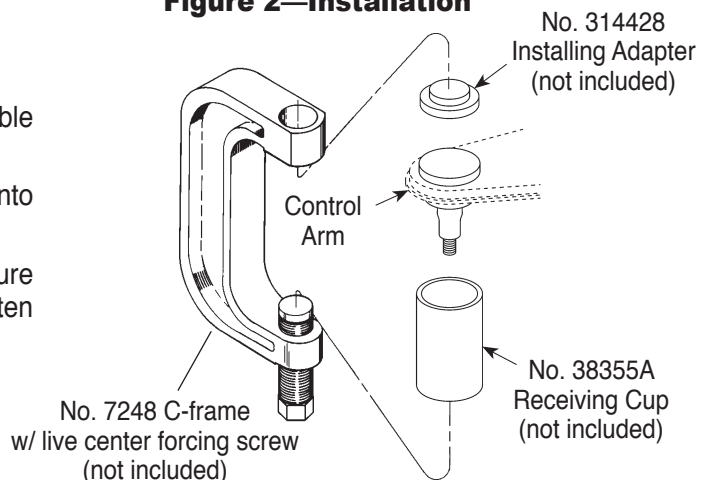

Operating Instructions

Application: 1995-'04 Toyota Tacoma 4WD, Prerunner 2WD
 1996-'02 Toyota 4Runner 2WD & 4WD
 2000-'06 Toyota Tundra 2WD & 4WD
 2001-'08 Toyota Sequoia 2WD & 4WD

Removal

1. Replace the forcing screw in the C-frame with OTC No. 314392 live center forcing screw.
2. Remove the ball joint dust boot.
3. Assemble the ball joint press over the control arm as shown in Figure 3.
4. Turn the forcing screw until the removing adapter meets the control arm. Check the alignment of all tooling and components. Tighten the forcing screw until the ball joint is removed.

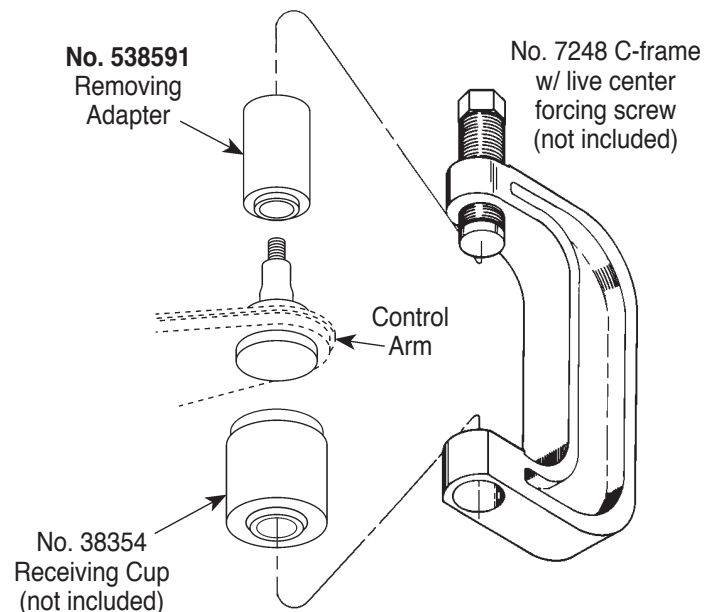


Figure 3—Removal

Installation

1. Clean the control arm and coat the I.D. with a suitable lubricant.
2. Insert the replacement ball joint as straight as possible into the vehicle control arm.
3. Assemble the ball joint press components as shown in Figure 4. Check the alignment of all tooling and components. Tighten the forcing screw until the ball joint is firmly seated.

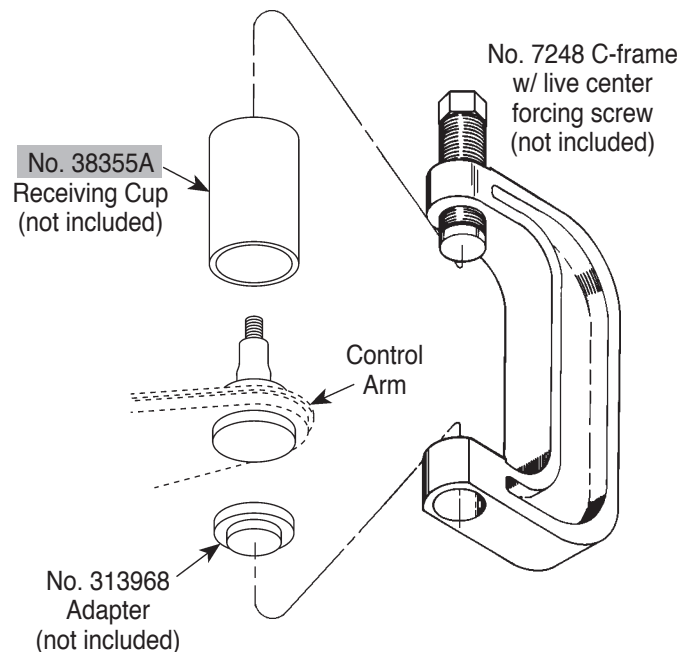


Figure 4—Installation

Shaded areas reflect the last revision made to this form.

Refer to any operating instructions included with the product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected by OTC.

Therefore: Use only genuine OTC replacement parts.

Additional questions can be directed to our Technical Service Dept.