



655 Eisenhower Drive
Owatonna, MN 55060 USA
Phone: (507) 455-7000
Tech. Serv.: (800) 533-6127
Fax: (800) 955-8329
Order Entry: (800) 533-6127
Fax: (800) 283-8665
International Sales: (507) 455-7223
Fax: (507) 455-7746
Website: otctools.com

Form No. 545364

Instructions for:

6005A



Glow Plug Remover

1. Remove the sensor wire from the glow plug sensor connector.
2. Unthread the glow plug until all threads are exposed.
3. Lightly spray the glow plug with appropriate lubricant.
4. Select a split nut that fits the application (10 mm or 12 mm). Open the split nut, and install it around threads near the top of the glow plug. Completely close the split nut.
5. If possible, install one of the spacers between the split nut and the head of the glow plug. A spacer gives a solid base for extraction without breaking off the glow plug.
6. Attach an open-end wrench (11/16 in. or 18 mm) or pliers to the split nut. Attach a box-end wrench or deep socket (10 mm or 12 mm) to the top of the glow plug.
7. Hold the split nut wrench in place, and resume unthreading the glow plug until it has been completely extracted.

Part No.	Description
545371	Spacer Assembly—4.7 mm
545372	Spacer Assembly—6.3 mm
545373	Spacer Assembly—7.8 mm
545374	Split Nut—10 mm
545375	Split Nut—12 mm