



655 EISENHOWER DRIVE  
 OWATONNA, MN 55060-0995 USA  
 PHONE: (507) 455-7000  
 TECH. SERV.: (800) 533-6127  
 FAX: (800) 955-8329  
 ORDER ENTRY: (800) 533-6127  
 FAX: (800) 283-8665  
 INTERNATIONAL SALES: (507) 455-7223  
 FAX: (507) 455-7063  
 WEBSITE: WWW.OTCTOOLS.COM

Form No. 565953

Instructions  
 for:

9308

## Bottle Jack

Max. Capacity: 9308 - 8 Tons

*These instructions have been written to help the user more effectively use and maintain OTC jacks. Some of the information applying to construction, installation, operation, inspection, and maintenance of hydraulic jacks was selected from ANSI B30.1 and ASME/ANSI PALD-1. It is strongly recommended that the user read these two documents, which may be ordered from the American Society of Mechanical Engineers, United Engineering Center, 345 East 47th, New York, New York 10017.*


### Operating Instructions



**WARNING:** Failure to heed the following warnings can result in personal injury and/or equipment damage. These warnings cannot cover every situation. Have safety foremost in your mind when setting up a job.



- Read, understand, and follow the operating instructions, and the ANSI B30.1 and ASME PALD-1 safety standards for jacks. If the operator cannot read English, operating instructions and safety precautions must be read and discussed in the operator's native language.

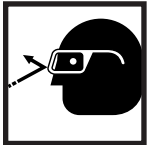

- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.

- Inspect the jack before each use; do not use the jack if it is damaged, altered, or in poor condition.
- To prevent tipping, set up the jack on a hard, level surface. Set vehicle parking brake and block tires.



- The load must not exceed the rated lifting capacity of the jack. Lift only dead weight.

- Center the load on the jack saddle, because off-center loads can damage seals and cause hydraulic failure.

- Use the jack for lifting purposes only. This jack is designed to LIFT loads, NOT SUPPORT loads. Immediately support a lifted load with jack stands.

- Stay clear of lifted loads.

- Use only approved hydraulic fluid, such as Chevron AW Hydraulic Oil MV or equivalent.

#### Instructions

**To raise the jack,** use narrow end of jack handle to tighten release valve clockwise (CW). Insert handle into socket, and operate pump.

**To lower the jack,** slowly open the release valve knob by turning it counterclockwise (CCW).

**To use the jack in a horizontal position,** use Figure 1 to determine how to use the jack in a horizontal position.

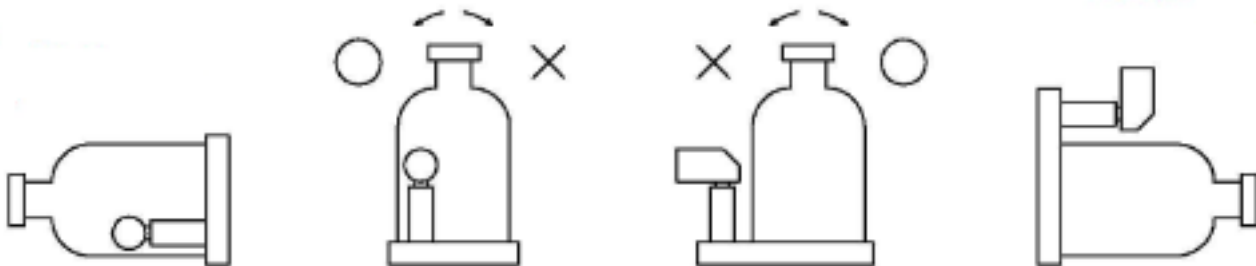


Figure 1

© 2012

Sheet No. 1 of 1

Date: Rev. C, August 21, 2012

**Parts List**

| Item No. | Qty. | Description     | Item No. | Qty. | Description   |
|----------|------|-----------------|----------|------|---------------|
| 1        | 1    | Body Assembly   | 17       | 1    | Snap Ring     |
| 2        | 3    | Steel Ball      | 18       | 2 *  | O-ring        |
| 3        | 1 *  | O-ring          | 19       | 2 *  | Nylon Gasket  |
| 4        | 1    | Release Rod     | 20       | 1    | Pump Cylinder |
| 5        | 2    | Spring          | 21       | 2    | Shift         |
| 6        | 2 *  | Copper Washer   | 22       | 3    | Pin           |
| 7        | 2    | Screw           | 23       | 1    | Rod Join      |
| 8        | 1 *  | Oil Filler Plug | 24       | 1    | Pin           |
| 9        | 1    | Steel Ball      | 25       | 1    | Handle Socket |
| 10       | 1    | Retainer Ring   | 26       | 1 †  | Rear Handle   |
| 11       | 1 *  | O-ring          | 27       | 1 †  | Middle Handle |
| 12       | 1 *  | Sealing Washer  | 28       | 1 †  | Front Handle  |
| 13       | 1    | Piston Rod Part |          |      |               |
| 14       | 1 *  | Washer          |          |      |               |
| 15       | 1 *  | O-ring          |          |      |               |
| 16       | 1 *  | Bushing         |          |      |               |

\* Included in SEAL KIT 566145  
 † Included in HANDLE KIT 566162

