



655 Eisenhower Drive  
Owatonna, MN 55060 USA  
Phone: (507) 455-7000  
Tech. Serv.: (800) 533-6127  
Fax: (800) 955-8329  
Order Entry: (800) 533-6127  
Fax: (800) 283-8665  
International Sales: (507) 455-7223  
Fax: (507) 455-7063

Form No. 571927

Operating Instructions  
for:

5750

Original Instructions

## Wheel Tipper

*Application: Steel or Aluminum Wheels, inflated or uninflated*

*Description: Tool reduces chance of injury when maneuvering steel or aluminum wheels for service.*

 
### Safety Precautions



**CAUTION:** To prevent personal injury and/ or property damage,



- Study, understand, and follow all safety precautions and operating instructions before using this wheel tipper. If the operator cannot read instructions, operating instructions and safety precautions must be read and discussed in the operator's native language.



- Wear eye protection that meets ANSI Z87.1 and OSHA standards.

- Do not let go of the handle once the wheel has started to tilt.

- Do not leave the wheel unattended in an upright position.



- No alteration shall be made to this product.

- Do not use this wheel tipper for anything other than its intended purpose.

- Inspect the condition of the wheel tipper before each use; do not use if damaged, altered, or in poor condition.

### Explanation of Safety Signal Words

The safety signal word designates the degree or level of hazard seriousness.



**DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.





**CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

**CAUTION:** Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

Sheet No. 1 of 1

Issue Date: Rev. A March 5, 2014


## Operating Instructions

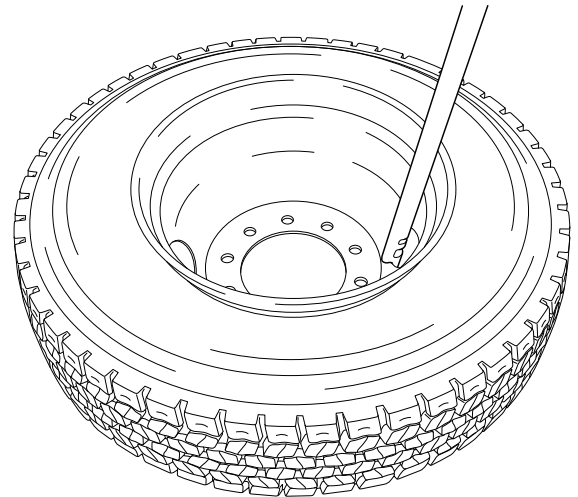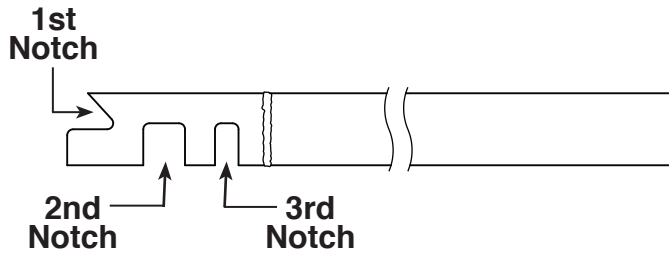

**Figure 1**

### Hub Flange Against Floor (steel or aluminum wheel)


1. Hook the first notch of the wheel tipper in the hole opposite the valve stem. See Figure 1.
2. Place both hands on the grip end of the tool.
3. Slowly push down on the handle of the wheel tipper to raise the wheel to an upright position.
4. Remove the wheel tipper.

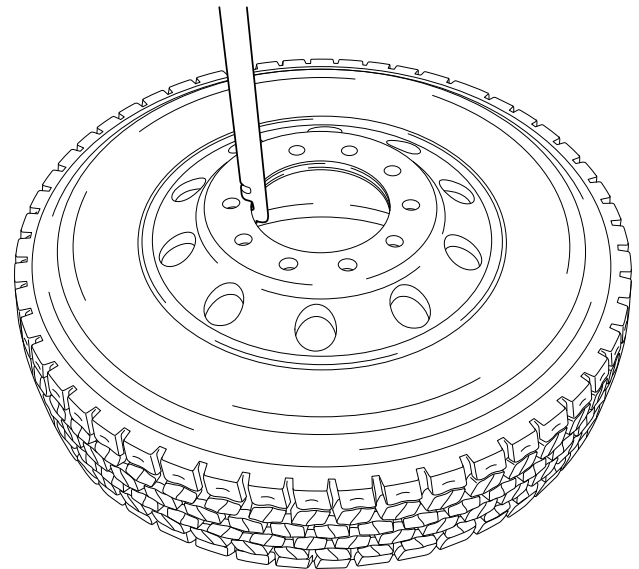

**Figure 2**

### Hub Flange Facing Up

1. **Aluminum Wheel:** Hook the second notch of the wheel tipper to the rim of the wheel as shown in Figure 2
- Steel Wheel:** Hook the third notch of the wheel tipper to the rim of the wheel as shown in Figure 3.
2. Place both hands on the grip end of the tool.
3. Slowly push down on the handle of the wheel tipper to raise the wheel to an upright position.
4. Remove the wheel tipper.

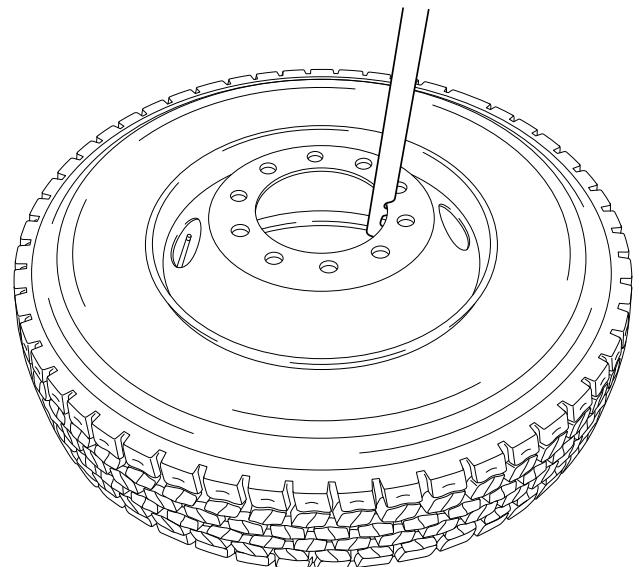

**Figure 3**