



655 EISENHOWER DRIVE  
OWATONNA, MN 55060 USA  
PHONE: (507) 455-7000  
TECH. SERV.: (800) 533-6127  
FAX: (800) 955-8329  
ORDER ENTRY: (800) 533-6127  
FAX: (800) 283-8665  
INTERNATIONAL SALES: (507) 455-7223  
FAX: (507) 455-7063

Form No. 562922

Parts List &  
Operating Instructions  
for:

5713

Original Instructions

## Tire Bead Seater

Application: Seats tubeless tires in a wide range of sizes.  
For example, small ATVs, passenger cars and trucks, heavy-duty vehicles, and agricultural machinery.



*Description:*  
This equipment uses compressed air to lift and seal the tire bead to the wheel rim.

### Explanation of Safety Signal Words

The safety signal word designates the degree or level of hazard seriousness.

**!** **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

**!** **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**!** **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

**CAUTION:** Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

© Bosch Automotive Service Solutions LLC

Sheet No. 1 of 3

Issue Date: Rev. C March 8, 2013

## Safety Precautions



**CAUTION:** To prevent personal injury and/ or property damage,



- Study, understand, and follow all safety precautions and operating instructions before using the Tire Bead Seating Tool. If the operator cannot read instructions, operating instructions and safety precautions must be read and discussed in the operator's native language.
- Only qualified operators may install, operate, adjust, maintain, clean, repair, inspect, or transport this tool.
- Inspect the condition of the tool before each use; do not use if damaged, altered, or in poor condition.




- Wear ear and eye protection that meet ANSI and OSHA standards.
- Do not exceed the maximum air pressure rating of 150 psi. Overfilling the air tank may result in an explosion. Recommended operating air pressure is 90 psi to 140 psi.



- Do not point the air nozzle at a person.
- Hold the nozzle securely against the wheel rim with both hands during the burst of air.
- Discharge the air tank when it is not in use.
- Do not tighten or loosen fittings when the tank is charged.
- Drain the tank periodically, but never remove the drain plug when the tank is charged.
- Do not use this tool for anything other than its intended purpose.
- Do not inflate damaged tires or tires on damaged rims.
- No alteration shall be made to this product.
- Use only those repair parts called out in the parts list in this document. Items found in the parts list have been carefully tested and selected by OTC.

## Assembly Instructions

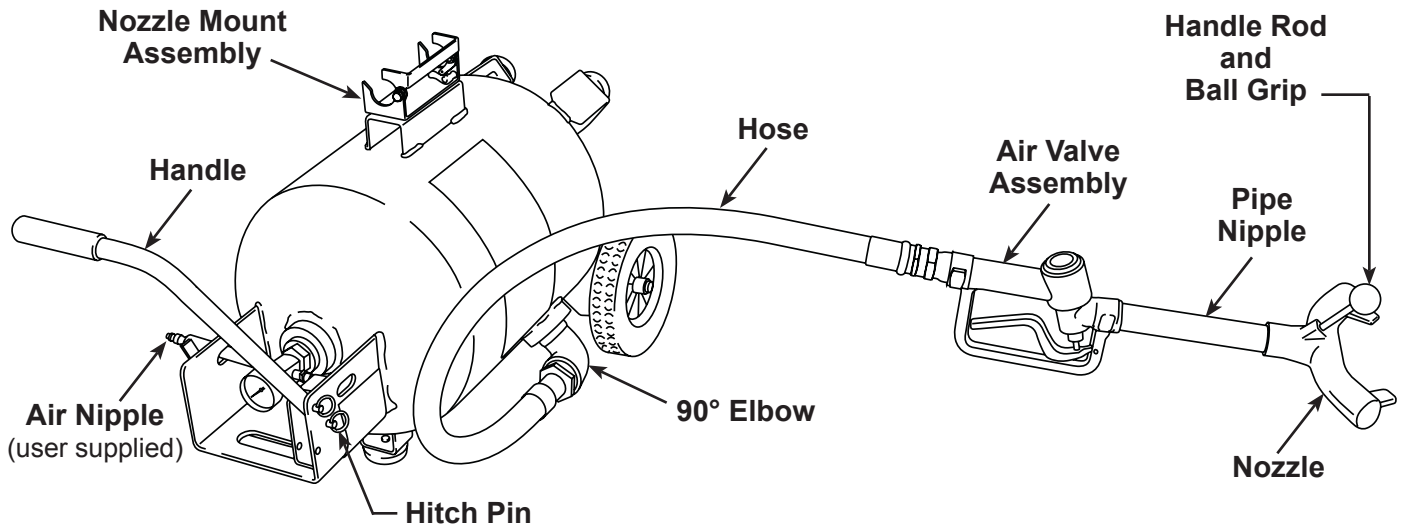

Item numbers refer to the parts list.


**CAUTION:** To prevent equipment damage, do not overtighten the threaded connections.

1. Attach the nozzle mount assembly (Item No. 16) to the air tank using two hex hd. cap screws and two hex nuts (Nos. 21 & 28).
2. Apply thread tape to the threads on the 90° elbow (8) and install it into the air tank as shown.
3. Apply thread tape to the threads on both ends of the hose (20) and thread the end that does not swivel into the 90° elbow.
4. Thread the air valve assembly (15) into the swivel end of the hose.
5. Apply thread tape to the threads on both ends of the pipe nipple (18) and thread one end into the air valve assembly.
6. Thread the nozzle (17) onto the pipe nipple.
7. Thread the handle rod (19) into the nozzle, and the ball grip (27) onto the end of the rod.
8. Attach the handle (7) to the top bracket using two hitch pins (31).
9. Connect an air nipple (not supplied) to the air fitting.


## Operating Instructions

1. Position the tire with the narrow bead on top and the tire valve facing up, if possible. It may be necessary to supply air through the valve while seating the bead.
2. Connect shop air to the air fitting on the Tire Bead Seater. The air supply must be clean, dry, oil-free, and regulated.
3. Open the air valve until the gauge on the air tank reads a minimum of 100 psi. Air pressure must be between 90 psi and 140 psi. Close the air valve.
4. Disconnect shop air from the air tank and connect it to the tire valve.
5. Apply tire lubricant around the rim and tire bead.
6. Place the nozzle on the wheel, opposite the tire valve, catching the rim with the two locating bosses on the bottom of the nozzle. See Figure 1.
7. Use the ball grip to hold the nozzle on the rim, with the rear of the nozzle tilted at a slight upward angle. The nozzle should not touch the tire sidewall during inflation.
8. Place your other hand on the air valve assembly as shown in Figure 2. Fully open and release the air valve to apply a quick blast of air to seat the tire bead.
9. Completely seat the tire by applying air through the tire valve.

*Note: If the valve core was removed, reinstall the valve core and finish inflating the tire to the manufacturer's recommended operating procedure.*

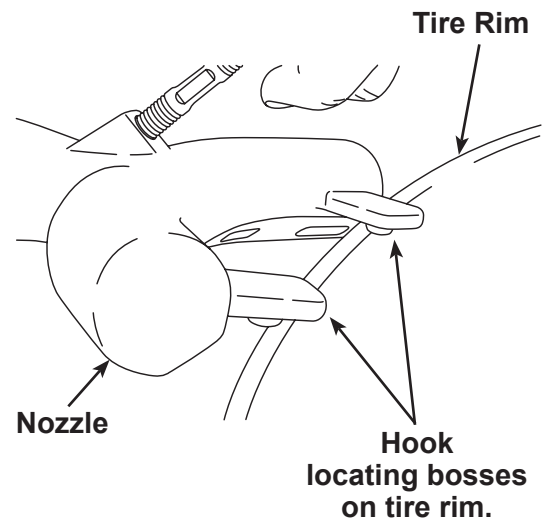


**Figure 1**

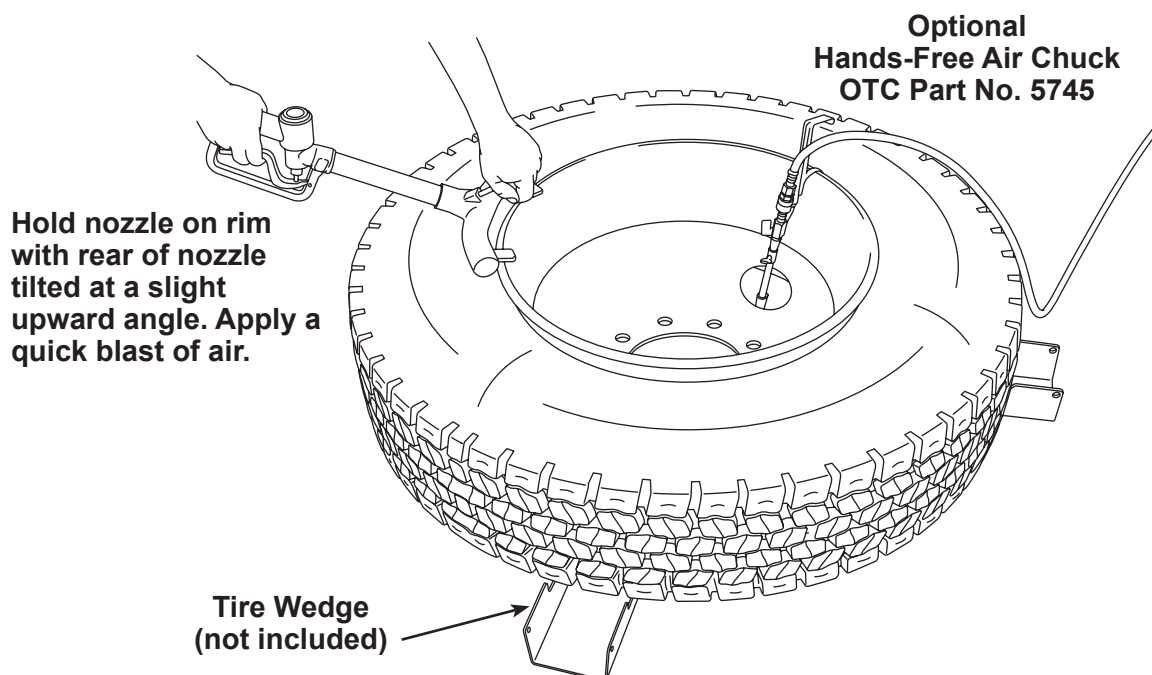

**Figure 2**

Replacement Parts List

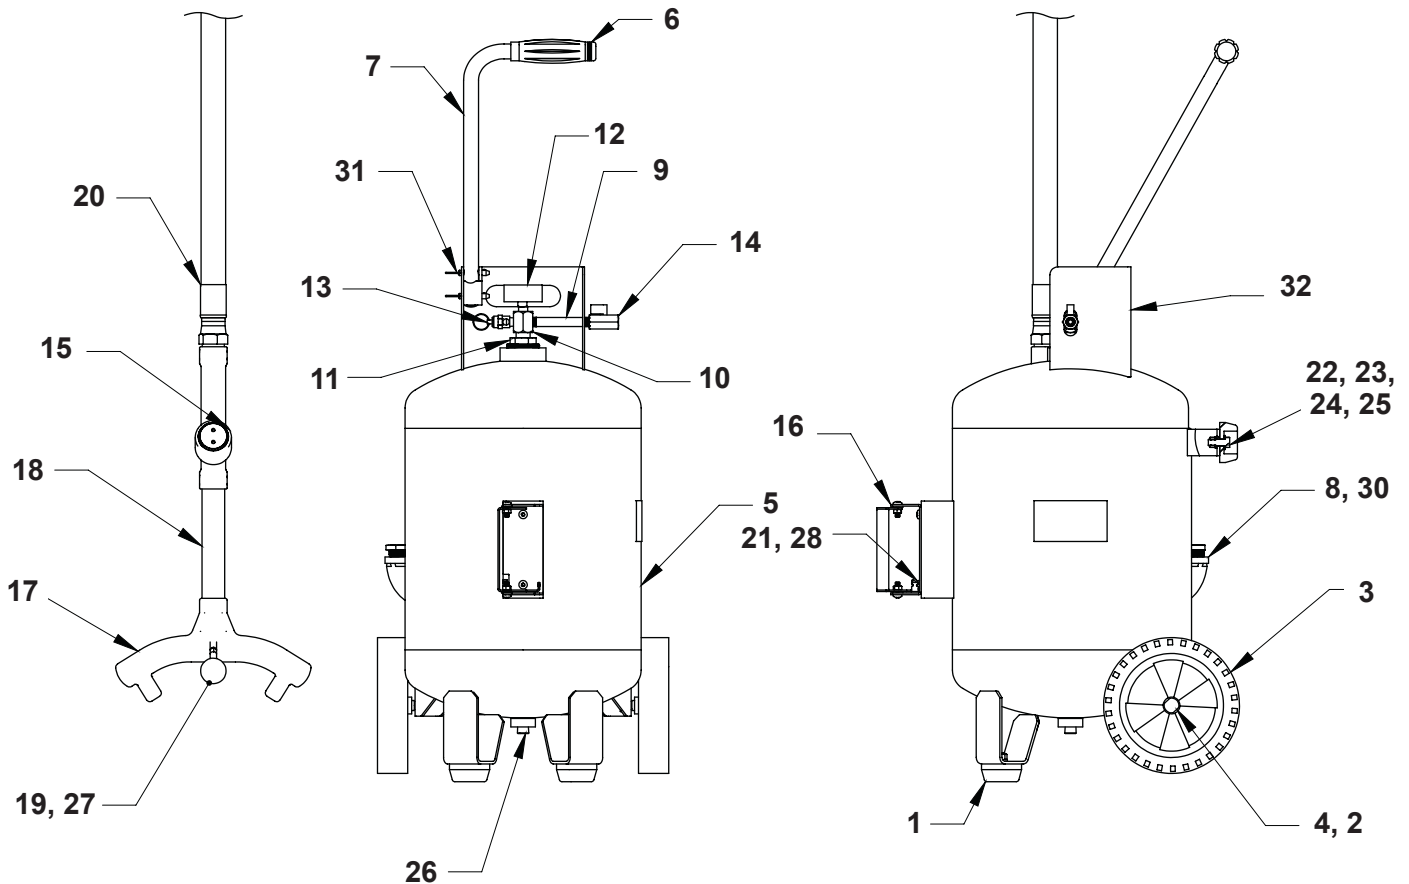


Item No.	Qty.	Description
5	1	Air Tank (part no. 560732)
8	1	90° Elbow (part no. 560749)
15	1	Air Valve Assembly (part no. 562999)
20	1	Hose (part no. 560750)
1	3	Rubber Foot (part no. 560733)
<b>563984 Handle Kit</b>		
31	2	Cotterless Hitch Pin
6	1	Handle Grip
7	1	Handle
<b>563985 Wheel Kit</b>		
3	2	Wheel
4	2	Shoulder Bolt
2	2	Hex Flange Nut — M12 x 1.75
<b>563986 Hardware Kit</b>		
22	3	Hex Head Cap Screw — 3/8-16 UNC x 1 in.
23	3	Plain Washer — for 3/8 in. bolt
24	3	Lockwasher — for 3/8 in. bolt
25	3	Hex Nut — 3/8-16 UNC
26	1	Hex Pipe Plug
14	1	Ball Valve
32	1	Warning Decal
30	1	Reducer

Item No.	Qty.	Description
<b>563987 Air Inlet Kit</b>		
9	1	Nipple — .250 NPT
10	1	3-Way Air Fitting
11	1	Reducer
12	1	Pressure Gauge — 200 psi
13	1	Relief Valve — 150 psi
<b>563988 Nozzle Kit</b>		
17	1	Nozzle
18	1	Pipe Nipple
19	1	Threaded Handle Rod
27	1	Ball Grip
<b>563989 Nozzle Mount Kit</b>		
21	2	Hex Nut — 1/4-20 UNC
28	2	Pan Hd. Machine Screw — 1/4-20 x .75 in
16	1	Nozzle Mount Assembly

Replacement Parts List continued on next page.

Replacement Parts List contd.

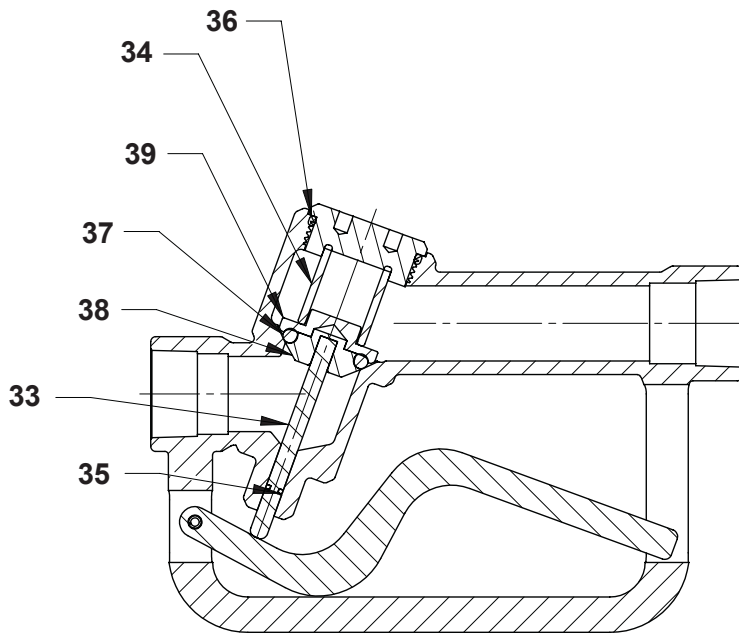

Item No.	Qty.	Description
<b>564161 Air Valve Repair Kit</b>		
33	1	Pump Rod
34	1	Compression Spring
35	1	Pump Rod O-ring
36	1	Cap O-ring
37	1	Seat O-ring
38	1	Seat
39	1	Cap

### Inspection and Maintenance



**CAUTION:** To prevent personal injury,

- Only qualified personnel shall perform inspections and repairs to the Tire Bead Seater.
- Inspect the condition of the tool before each use; do not use if damaged, altered, or in poor condition. If damage is found, discontinue use.
- Use only those repair parts called out in the parts list in this document. Items found in the parts list have been carefully tested and selected by OTC.

#### Inspection

Before each use, an approved inspector must inspect the condition of the tool; do not use if damaged, altered, or in poor condition. Check the air tank and fitting for cracks. If damage is found, discontinue use.

#### Maintenance

Store the Tire Bead Seater in the vertical position with the drain plug removed. Never remove the drain plug when the tank is charged. Never store or transport a charged tank.

#### Repair

When repairing the Tire Bead Seater, use only those repair parts called out in the parts list in this document. Items found in the parts list have been carefully tested and selected by OTC.

#### Disposal

At the end of the useful life of the Tire Bead Seater, dispose of the components according to all state, federal, and local regulations.