

## OTC Scanning Suite 4.3 Installation Instructions


---

Go to <https://www.otctools.com/service-and-support/updates-and-downloads>, select your product, and click the **Download Scanning Suite 4.3** link. Save the otc\_scanningsuite\_ver4\_3\_install.exe file to your PC. We recommend saving the file to your **Desktop**. It can be deleted after the installation process is complete.


Once the download has completed, double click on the otc\_scanningsuite\_ver4\_3\_install.exe icon and proceed to next step.



1. Select the language you would like to install and click **OK**.

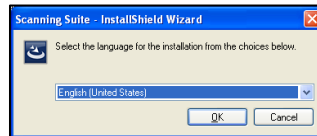


2. Wait for the installation to begin.



3. Click **Next**.




4. If you accept the terms in the license agreement, click the respective bubble and click **Next**.

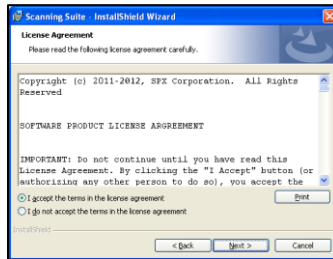


5. The Scanning Suite will install the files in a default location. Click **Next** to continue.


Note: If you prefer to install the files in another location, click **Browse** to choose another destination folder and click **Next**.

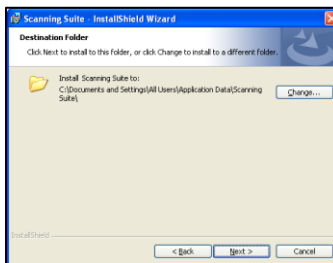

6. Click **Install**.

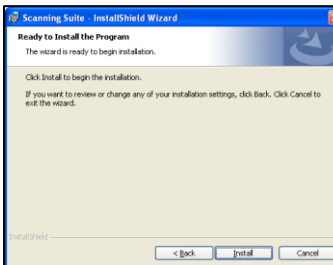

7. Please wait while Scanning Suite is installed.

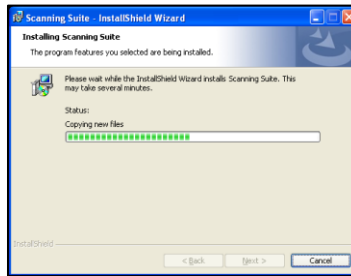

8. Click **Finish**. The installation is complete.

