

OTC Scanning Suite 4.0 Installation Instructions

1. Insert the Scanning Suite CD into the PC CD or DVD drive.
2. The CD should automatically start running. If it does not, simply browse to the CD or DVD drive and double click **setup.exe**.

OR

Go to www.otctools.com/updates, select your product, and click the **Download Scanning Suite 4.0** link. Save the OTC_ScanningSuite_Ver4_Install.exe file to your PC. We recommend saving the file to your **Desktop**. It can be deleted after the installation process is complete.


Once the download has completed, double click on the OTC_ScanningSuite_Ver4_Install.exe icon and proceed to next step.



3. Select the language you would like to install and click **OK**.




4. Wait for the installation to begin.



5. Click **Next**.




6. If you accept the terms in the license agreement, click the respective bubble and click **Next**.

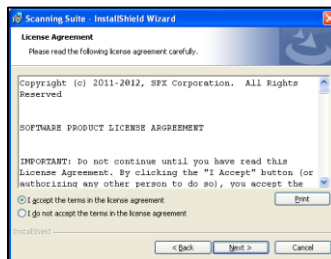


7. The Scanning Suite will install the files in a default location. Click **Next** to continue.


Note: If you prefer to install the files in another location, click **Browse** to choose another destination folder and click **Next**.

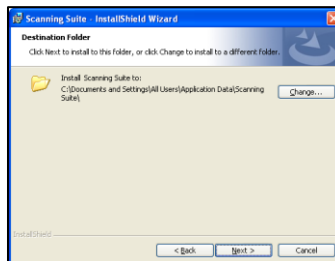

8. Click **Install**.

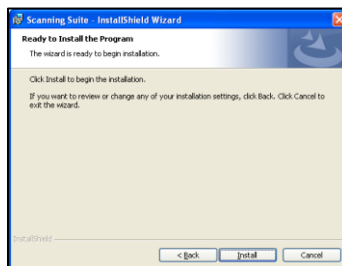

9. Please wait while Scanning Suite is installed.

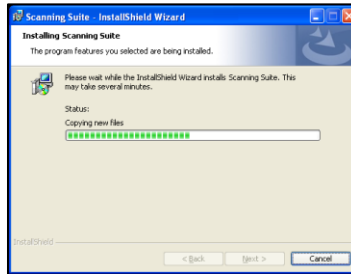

10. Click **Finish**. The installation is complete.

